



User Manual



PB-M10

PUREBEATS MOVE

TRUE WIRELESS EARBUDS

Included Items



Charging case x1



Earbuds x1



Silicon Ear tips x3
(Size M is on the earphones)



USB- C charging cable



User Manual x1

Specification:

Model No.	: PB-M10	Sensitivity	: 115 dB
Material	: ABS + PC	Noise Reduction	: 30 dB
Case Battery	: 500mAh	Water & Sweat Resistance	: IPX5
Earbuds Battery	: 40mAh	Charging Port	: Type-C
Bluetooth	: V5.4	Charging Time	: 1.5-2 Hrs
Transmission Range	: 10 m	Playtime	: 5-6 Hrs
Speaker	: 13 mm x2	Standby Time	: 120 Hrs
Frequency	: 20Hz-20KHz	Product Weight	: 42.2 g
Impedance	: 32 Ω $\pm$ 5%	Product Size	: 58.8*49.5*26.5 mm

1. Power On / Off

- Power On:
 - Earbuds turn on automatically when removed from the case.
 - Or, press and hold the MFB button for 2 seconds.
 - Light: White light flashes quickly.
 - Voice: "Power on".
- Power Off:
 - Place earbuds in the case and close the lid.
 - Or, press and hold the MFB for 2 seconds.
 - Light: White light stays on for 2 seconds, then turns off.
 - Voice: "Power off".

2. Pairing

- TWS Pairing:
 - Auto pairing starts when powered on.
 - Earbuds connect to each other with random roles.
 - Light: Master – white flashes 2s; Slave – white flashes 5s.
 - Voice: "Pairing".
 - If disconnected, white light flashes slowly and voice says "Pairing failed".
- Phone Pairing:
 - Turn on Bluetooth and select "Neo-One PBM10".
 - Light turns off when connected.
 - Voice: "Connected to log in TWS."
 - Auto shutoff if not paired in 3 minutes.

3. Connection

- Disconnected:
 - Voice: "Disconnect".
 - Auto Reconnect:
 - Reconnects to the last device when powered on.

4. Calls

- Answer: Single-click MFB.
- Reject: Double-click MFB.
- End: Single-click MFB during call.

5. Music Controls

- Play / Pause: Single-click MFB.
- Previous Track: Double-click left MFB.
- Next Track: Double-click right MFB.

6. Other Features

- Volume:
 - Long-press Right to increase.
 - Long-press Left to decrease.
 - Beeps at max/min volume.
- Voice Assistant (Siri): Triple-click left MFB.
- ANC / Transparency Mode: Triple-click right MFB.
- Game / Music Mode: Quadruple-click either earbud.
- Battery Display: Shown on the phone.
- Low Battery Warning:
 - Below 3.2V: Beeps every minute.
 - Light: White light flashes every 2 seconds.
 - Voice: "Low battery, please charge your earbuds".

How to Connect or Pair ?



1. When you take the earbuds out of the charging case for the first time, the indicator lights on the earbuds will flash and wait for 10 seconds
2. Enable the Bluetooth function on your mobile phone.
3. Find the Bluetooth name "Neo-One PBM10" on your mobile phone for pairing.
The indicator lights will turn off after a successful connection.

Safety Instructions

1. Keep the earbuds away from children under 3 years to avoid accidental swallowing.
2. Listen music at low sound level to protect your hearing.
3. Keep the product away from extremely hot and cold environments, as this may damage the battery and circuits.
4. Only charge the device from the 5V USB port of a mobile phone, laptop or PC



Please regularly clean the charging contacts of the earbuds and the charging case to avoid charging failures.



Scan the QR code to download the app.



WARRANTY

The warranty covers your neoone product, including accessories against manufacturing defects (if any) for 12 months from the date of purchase.

Things that are not covered in the warranty

Unauthorized tampering, modifications or repairs of the product.

Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the neoone product.

For further information on product replacement/refund queries please refer to the terms and conditions mentioned in our online return policy section on www.neo-one.com.np.