

neOne

USER MANUAL



PureBeats Challenge


PB-C10

TRUE WIRELESS GAMING EARBUDS

Know your



Indicator Light

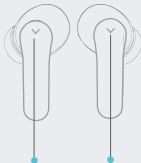

Multifunctional Touch Indicator Light

What's in the Box ?

Charging Case

Earbuds

Type C Charging Cable

Manual

Extra Pair of Eartips

Product Specification

Model No.: PB-C10

Material: ABS + PC

Case Battery: 400mAh

Earbuds Battery: 40mAh *2

Bluetooth: V5.3

Transmission Range: >10m

Speaker: 10mm *2

Frequency: 20Hz-20kHz

Impedance : 32Ω±5%

Sensitivity: -38

Water & Sweat Resistant: IPX5

Charging Port: Type-C

Charging Time: 1.5-2 Hrs

Playtime: 5-6 Hrs

Standby Time: 120 Hrs

Product Weight: 37 g

Product Dimensions: 57.5*48.2*24.5 mm

How to Use Your Purebeats Challenge earbuds?

Touch Controls

The Touch Area (Multi-Functional Touch Panel) is located in the upper part of the earbuds handle.

LED Functions

Charging The Case

Front LED flashes green continuously, and side LEDs breathe

When Fully Charged

Front LED stays green, and side LEDs goes OFF

Power ON/OFF:

Power ON:

Auto: Open the charging case and take out the earbuds to Power ON.

Manually: Tap and hold the multifunction button (MFB) for 3 seconds.

Power OFF

Auto: Place both the earbuds in the charging case, close the lid.

Manually: Hold MFB for 5 seconds.



Play/Pause

Tap the MFB once



Next Track

Double Tap the right MFB



Previous Track

Double Tap the left MFB



Volume +

Triple Tap the right MFB



Volume -

Triple Tap the left MFB



Voice Assistant

Long Press the MFB for 2s



Answer the Call

Tap the MFB once



End Call/Reject

Double Tap the MFB



Game/Music Mode

Tap the MFB four times

Pairing

Open the charging case, and take out the earbuds, the earbuds LEDs will start flashing automatically until paired with a device.

Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "Neo-one PBC10" and click on it.

Single Earbud Usage (Mono Mode): Please note that both the earbuds can be used in Mono Mode.

When both the earbuds are connected, put one earbud back into the charging case; the other earbud can be used normally.

Bluetooth Lost:

Turn off mobile phone's Bluetooth, earbuds will enter pairing mode and can pair with other devices. If the connection range is exceeded, the earbuds will enter back into connection mode. If there's no connection within 5 minutes, the earbuds will turn off.

Reset

If your earbuds fail to pair, or only one works, reset them.

1. Delete all "Neo One" Bluetooth records on the phone and turn off Bluetooth.
2. Put earbuds in the charging case and then take out to pairing modes, tap L&R 5 times simultaneously, hear "DU" prompt voice to clear all pairing.
3. Put earbuds back into the charging case.



WARRANTY

The warranty covers your neoone product, including accessories against manufacturing defects (if any) for 12 months from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the neoone product.

For further information on product replacement/refund related queries please refer to the terms and conditions mentioned in our online return policy section on www.neo-one.com.np