

ncOnC



PB-R10
PUREBEATS RISE
WIRELESS ANC HEADPHONES



Specification of Product

Model of Product: PB-R10

Version: V5.4

Effective Distance: Approx 10m

Speaker Diameter: $\phi 40\text{mm} \times 2$

Impedance: 32Ω

Frequency Response: 20Hz-20KHz

Microphone Sensitivity: $-38\text{dB} \pm 3\text{dB}$

Input: 5V=300mAh

Battery Capacity: 300mAh $\times 2$

Duration: Approx 20 H

Charging Time: Approx 2 H

Item list



Headphone *1



3.5mm Audio Cable *1




User Manual




USB-C Charging Cable *1



5

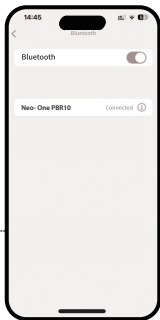

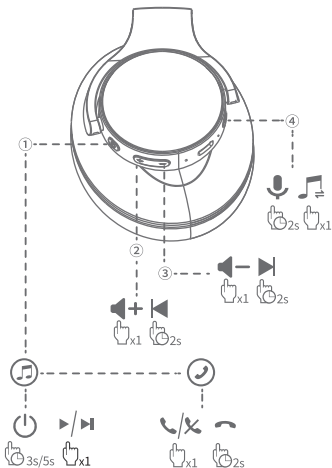

Operating Instruction of Product

Power On (NO.①)

Long press the power key button for 3 seconds, turn on the device, with the prompt sound of "Du".

Shut Down (NO.①)

Long press the power key button for 5 seconds, turn it off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down, with the prompt sound of "Du".

Bluetooth Device Connection (NO.⑤)

a. For the first time, through the Bluetooth device setting option, search for the Bluetooth pairing name of the headset

"Neo-One PBR10", and tap to connect successfully.

b. For reusing, and automatically connect the Bluetooth device.

Note: The Android system shall be turned on: the volume of Bluetooth device is synchronized with the device

Function Operation (NO.①, ②, ③, ④)

Pause/Play: Tap the power key once.

Volume Up: tap "+" once. When the voice reaches the maximum volume, the prompt sound "Di" can be heard.

Volume Down: tap "-" once. When the voice reaches the maximum volume, the prompt sound "Di" can be heard.

Previous Song: Long press "+" for 2 seconds

Next Song: Long press "-" for 2 seconds

Call Answer/End: Tap the multi-function button once

Call Rejection: Long press the multi-function button for 2 seconds

Start the Voice Assistant: Long press the EQ button for 2 seconds

Bass Mode: tap the EQ button once to enter the bass mode, with the prompt sound of "Du", Tap again to turn off the bass mode with the prompt sound of "Ding Dong".

Note: The factory default is setting as standard mode

Audio Wired Connection (No.⑥)

Connect the headset to the device through the 3.5mm audio cable. All button functions of the headset are invalid in this mode, it can be controlled through the device.

Charging Cable Connection (No.⑦)

Connect the headset to the charger with the Type-C charging cable for charging.

Power Prompt

The Headset have a low battery, and the prompt sound is "Ding Dong", which will be reminded every 60 seconds

Indicator Light Display



Power On: White light flashes.

Power Off: White light turns off after flash.

Successful Pairing: White light is off.

Bluetooth Disconnection: White light flashes.

Headset Charging: Blue light is always on, and blue light turns off after full charge.

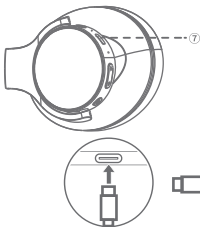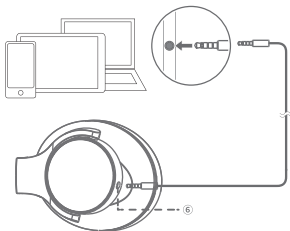



WARRANTY

The warranty covers your neoone product, including accessories against manufacturing defects (if any) for 12 months from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the neoone product.

For further information on product replacement/refund related queries please refer to the terms and conditions mentioned in our online return policy section on **www.neo-one.com.np**.